

OPERATOR'S MANUAL

81241X

SPECIFICATIONS, SERVICE KITS, GENERAL INFORMATION, TROUBLESHOOTING
INCLUDE MANUALS: 87100X Lower Pump End (pn 876015), 842003 Air Motor (pn 876021) & S-1099 General Information Manual (pn 876018)

RELEASED: 10-4-99
REVISED: 4-25-05
(REV. E)

8" AIR MOTOR
40:1 RATIO
6" STROKE

81241X TWO BALL PUMP SERIES 300 SERIES STAINLESS STEEL



**READ THIS MANUAL CAREFULLY BEFORE INSTALLING,
OPERATING OR SERVICING THIS EQUIPMENT.**

It is the responsibility of the employer to place this information in the hands of the operator. Keep for future reference.

SERVICE KITS

- Use only genuine Bink's replacement parts to assure compatible pressure rating and longest service life.
- **861033** for repair of air motor section.
- **861000** for repair of lower pump section. Refer to the chart on page 2 for description of the pump.
- **861001** optional kit for repair of lower pump section.

SPECIFICATIONS


Model Series (refer to option chart)	812410
Type	Air Operated, Two Ball
Ratio	40:1
Air Motor	842003
Motor Repair Kit	861033
Motor Diameter	8" (20.3 cm)
Stroke	6" (15.2 cm)
Air Inlet (female)	3/4 - 14 N.P.T.F. - 1
Air Exhaust (female)	1-1/4 - 11-1/2 N.P.T.F. - 1
Lower Pump End Series	87100X
Lower Pump Repair Kit	86100X
Material Inlet	1 - 11-1/2 N.P.T.F. - 1 (female) & 2 - 11-1/2 P.T.F. spec. short (male)
Material Outlet (female)	1 - 11-1/2 N.P.T.F. - 1
Weight	68.1 lbs (30.9 kg)

PERFORMANCE

Air Inlet Pressure Range	30 - 120 p.s.i. (2.1 - 8.3 bar)
Fluid Pressure Range	1200 - 4967 p.s.i. (82.2 - 342.6 bar)
Maximum Rec'd Cycles / Minute	60
Displacement In³ Per Cycle	14.4
Volume / Cycle	8 oz. (236.5 ml)
Cycles Per Gallon	16
Flow @ 60 Cycles / Minute	3.74 g.p.m. (14.2 l.p.m.)
Noise Level @ 60 p.s.i. - 40 c.p.m.	89.8 db(A) *

* The pump sound pressure level has been updated to an Equivalent Continuous Sound Level (L_{Aeq}) to meet the intent of ANSI S1.13-1971, CAGI-PNEUROP S5.1 using four microphone locations.

PUMP DATA

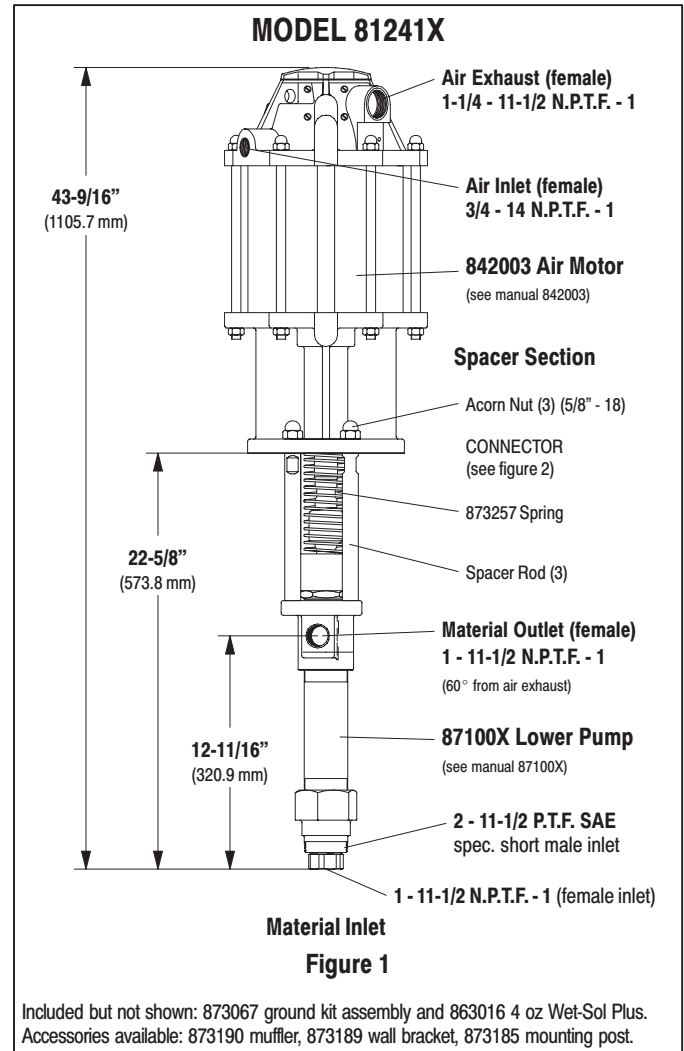

IMPORTANT

This is one of the four documents which support the pump. Replacement copies of these forms are available upon request.

- 81241X Model Operator's Manual (pn 876036)
- General Information - Industrial Piston Pumps (pn 876018)
- 87100X Lower Pump End Operator's Manual (pn 876015)
- 842003 Air Motor Operator's Manual (pn 876021)

BINKS®

North American Office
ITW Industrial Finishing
195 Internationale Blvd
Glendale Heights, IL 60139
Tel. 630-237-5000 Fax 630-237-5011

International Office
ITW Industrial Finishing
Ringwood Road, Bournemouth
Dorset, BH11 9LH, England
Tel. 0 1202 571111 Fax 0 1202 593883

PUMP OPTION DESCRIPTION CHART

81241 X
 PLUNGER TYPE

PACKING MATERIAL

UHMW-PE (upper and lower)

Optional Glass filled Teflon / Leather staggered (upper and lower)

SPRING ARRANGEMENT

Multiple Wave Spring

PLUNGER TYPE

0 Hardened Stainless Steel with hard chrome plating

5 Hardened Stainless Steel with ceramic coating

GENERAL DESCRIPTION

⚠ WARNING HAZARDOUS PRESSURE. Do not exceed maximum operating pressure of 4967 p.s.i. (342.6 bar) at 120 p.s.i. (8.3 bar) inlet air pressure.

PUMP RATIO X INLET PRESSURE TO PUMP MOTOR = MAXIMUM PUMP FLUID PRESSURE

Pump ratio is an expression of the relationship between the pump motor area and the lower pump end area. EXAMPLE: When 120 p.s.i. (8.3 bar) inlet pressure is supplied to the motor of a 7:1 ratio pump it will develop a maximum of 840 p.s.i. (57.9 bar) fluid pressure (at no flow) – as the fluid control is opened, the flow rate will increase as the motor cycle rate increases to keep up with the demand.

⚠ WARNING Refer to general information sheet for additional safety precautions and important information.

- The Two-Ball pumps are primarily designed for the pumping of medium viscosity fluids. Stainless Steel construction offers compatibility with a wide range of fluids. The two-ball design provides better priming of the lower foot valve. The double acting feature is standard in all Bink's industrial pumps. Material is delivered to the pump discharge outlet on both the up and down stroke.
- The motor is connected to the lower pump end by a spacer section. This allows for lubrication of the upper packing gland and prevents motor contamination because of normal wear and eventual leakage through the material packing gland. Be sure the solvent cup is adequately filled with lubricant to protect the upper packings and insure longest service life.

TROUBLE SHOOTING

Pump problems can occur in either the Air Motor section or the Lower Pump End section. Use these basic guidelines to help determine which section is affected.

If the pump will not cycle.

- Be certain to first check for non-pump problems including kinked, restrictive or plugged inlet / outlet hose or dispensing device. Depressurize the pump system and clean out any obstructions in the inlet / outlet material lines.
- Refer to the motor manual for trouble shooting if the pump does not cycle and / or air leaks from the air motor.

If the pump cycles but does not deliver material.

- Refer to the lower pump end manual for further trouble shooting.

PUMP CONNECTION – UPPER / LOWER

NOTE: All threads are right hand.

1. Lay the pump assembly on a workbench.
2. Remove the three nuts from the three spacer rods (figure 1).
3. Pull the air motor from the lower pump end until motor piston rod is in the "down" position and lower pump end rod is in "up" position.
4. Using e-ring pliers, slide the "e" ring up far enough to allow the sleeve to move upward and release the two connectors (figure 2).

PUMP CONNECTOR DETAIL

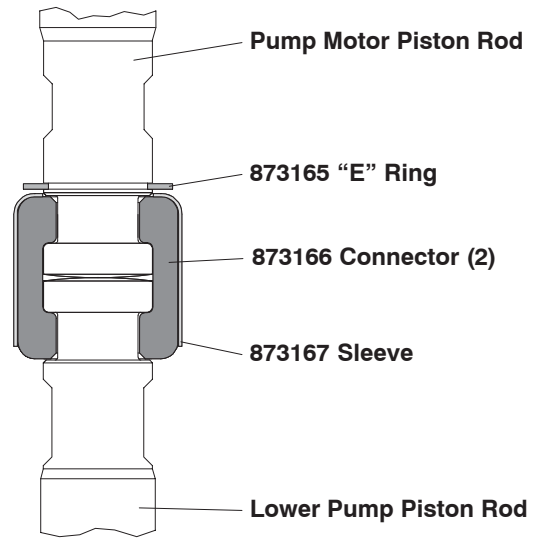


Figure 2

REASSEMBLY

1. Align the pump motor with the lower pump end. Position the air inlet of the motor 45° from the material outlet.
2. Install the two connectors and retain with the sleeve, slide the "e" ring back into position.
3. Reinstall the spacer rods to the pump motor.
4. Bring the motor and lower pump together and retain with the three nuts.